
Quick Installation Guide to Wireless Access Point

A. Hardware Installation

- Wired LAN connection: Connect an Ethernet cable (i.e. UTP/STP RJ45) from your computer's Ethernet (RJ45) port to one of the LAN ports of this Wireless Access Point.
- **2. Wireless LAN connection**: Locate this Wireless Access Point at free spaces to gain best Signal Strength.

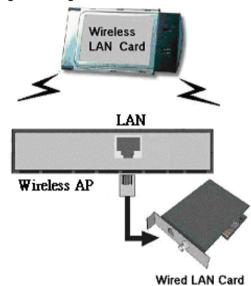

3. Power on: Plug the power cord into the outlet and the inlet of the Wireless Access Point.


B. Configuring TCP/IP Settings of Your Computer

For Windows 2000 and Windows XP:

- Click Start Menu, choose Settings, select the Control Panel and double click on Network and Dial-Up Connection. (In Windows XP, please click Start Menu -> Control Panel. Select Classic View in the upper left corner, and then Double-click on the Network Connections icon.)
- 2. Right click on the **Local Area Connection** bound to your LAN Card and select **Properties**. Choose **Internet Protocol (TCP/IP)** and click on the **Properties** Button.



- 3. In General tab, select Using the Following IP address and fill in:
- IP Address: 192.168.1.2, Subnet Mask: 255.255.25.0. Then Click on the *OK* button. Click on the *OK* button again in the *Local Area Connection Properties* Window.

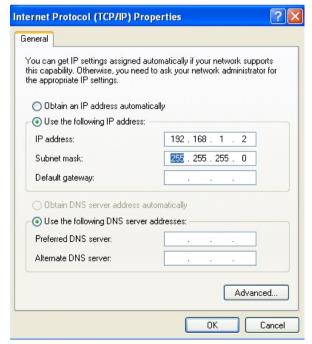

For Windows 95, 98 and ME:

 Click Start Menu, choose Settings, select the Control Panel and double click on Network. In Configuration tab, select TCP/IP and click on the Properties Button.



2. In IP address tab, select Specify an IP address and fill in:

IP Address: 192.168.1.2, Subnet Mask: 255.255.255.0. Then Click on the *OK* button. Click on the *OK* button again in the *Network* Window.

(Note: At this time Windows may require you to insert the Windows CD or restart your computer.)

C. Configuring Your Wireless Access Point with a Web Browser

Open your browser (i.e. Internet Explorer, etc.) and type the IP address (i.e. http://192.168.1.1) of this Wireless Access Point in the Address field. Press ENTER and it will pop up a logon window. Key in default username admin and password iktpw then click OK to the setup page. (Note: If you can't connect to your Wireless Access Point, please try to disable the proxy settings: (i.e. Open Internet Explorer, select Tools -> Internet Options. In Connection tab, click on the LAN Settings button and un-check all Automatic Configuration and Proxy Server options.)



2. Default Settings of this Wireless Access Point:

IP address: 192.168.1.1

Subnet Mask: 255.255.255.0

SSID: wireless_11a, wireless_11g

WEP: disabled

User name: admin

Password: iktpw

Note: You should configure your wireless network card based on the settings of the Wireless Access Point. Please refer to the User Manual in the CD-ROM for detail configuration.