

8-port Intelligent Switch

User's Manual

Version 2.0 (Aug.2004)

We make no warranties with respect to this documentation and disclaim any implied warranties of merchantability, quality, or fitness for any particular purpose. The information in this document is subject to change without notice. We reserve the right to make revisions to this publication without obligation to notify any person or entity of any such changes.

Trademarks or brand names mentioned herein are trademarks or registered trademarks of their respective companies.

Contents

1. INTRODUCTION	1
1.1 PACKAGE CONTENTS	1
2. WHERE TO PLACE THE INTELLIGENT SWITCH.....	1
3. CONFIGURE NETWORK CONNECTION.....	2
3.1 CONNECTING DEVICES TO THE INTELLIGENT SWITCH.....	2
3.2 CONNECTING TO ANOTHER ETHERNET SWITCH/HUB	2
3.3 APPLICATION.....	2
4. LEDS CONDITIONS DEFINITION	4
4.1 LEDS DEFINED	4
5. MANAGE / CONFIGURE THE SWITCH	5
5.1 INTRODUCTION OF THE MANAGEMENT FUNCTIONS.....	5
5.2 MANAGEMENT WITH CONSOLE CONNECTION	8
5.3 MANAGEMENT WITH HTTP CONNECTION.....	33
5.4 ABOUT TELNET INTERFACE	58
5.5 ABOUT SNMP INTERFACE.....	58
6. SOFTWARE UPDATE AND BACKUP	59
A. PRODUCT SPECIFICATIONS.....	60
B. COMPLIANCES.....	61

1. Introduction

This Intelligent switch is a Layer2 management switch with lots of advanced network functions including VLAN, trunking, spanning tree, mirror port, IP multicast, rate limit and port configuration. It supports console, telnet, http and SNMP interface for switch management. IEEE 802.1x is supported for port security application. These functions can meet most of the management request for current network.

1.1 Package Contents

- One Intelligent Switch
- One AC power cord
- One console cable
- This user's manual

2. Where To Place the Intelligent Switch

This Intelligent Switch can be placed on a flat surface (your desk, shelf or table). Place the Intelligent Switch at a location with these connection considerations in mind:


- The switch configuration does not break the rules as specified in Section 3.
- The switch is accessible and cables can be connected easily to it.
- The cables connected to the switch are away from sources of electrical interference such as radio, computer monitor, and light fixtures.
- There is sufficient space surrounding the switch to allow for proper ventilation (the switch may not function according to specifications beyond the temperature range of 0 to 50 degrees C).

3. Configure Network Connection

3.1 Connecting Devices to the Intelligent Switch


[Connection Guidelines:]

- For 10BaseT connection : Category 3 or 5 twisted-pair Ethernet cable
- For 100BaseTX connection : Category 5 twisted-pair Ethernet cable
- For UTP cable connection, always limit the cable distance to 100 meters (328 ft) as defined by IEEE specification
- Because this switch supports **Auto MDI/MDI-X** detection on each UTP port, you can use normal straight through cable for both workstation connection and hub/switch cascading.

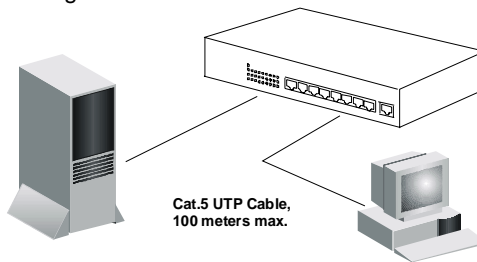

3.2 Connecting to Another Ethernet Switch/Hub


This Intelligent Switch can be connected to existing 10 Mbps or 100 Mbps hubs/switches. Because all UTP ports on the Intelligent Switch support Auto MDI/MDI-X function, you can connect from any UTP port of the Intelligent Switch to the MDI or MDI-X port of another hub/switch with Straight Through or Crossover cables.

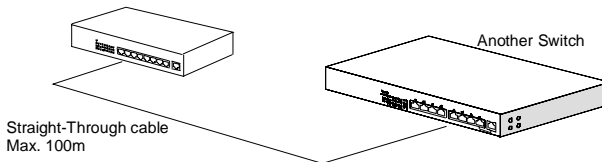

3.3 Application

A switch can be used to overcome the hub-to-hub connectivity limitations as well as improve overall network performance. Switches make intelligent decisions about where to send network traffic based on the destination address of the packet. As a result, the switch can significantly reduce unnecessary traffic.

The example below demonstrates the switch ability to segment the network. The number of nodes on each segment is reduced thereby minimizing network contention (collisions) and boosting the available bandwidth per port. With management function of the switch, network administrator is easy to monitor network status and configure for different applications.

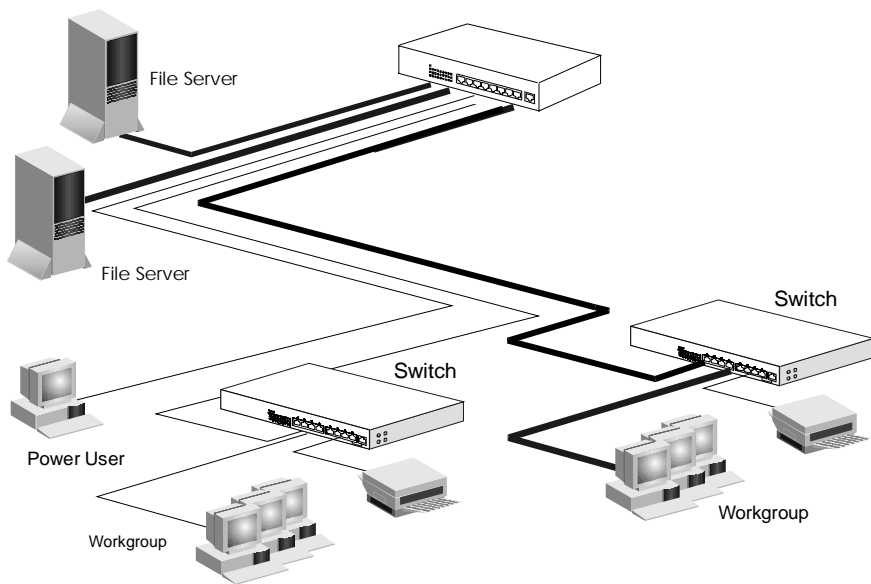

4. LEDs Conditions Definition

4.1 LEDs Defined

The LEDs provide useful information about the switch and the status of all individual ports.

LED	STATUS	CONDITION
Power(PWR)	ON	Switch is receiving power.
LINK / ACT	ON	Port has established a valid link.
	Flashing	Data packets being received or sent.
100M	ON	The connection is 100Mbps.
	OFF	The connection is 10Mbps.
FDX	ON	The connection is Full Duplex.
	OFF	The connection is Half Duplex.

5. Manage / Configure the switch

5.1 Introduction of the management functions

This switch is a L2 management switch. It supports in-band management function from SNMP, Http and Telnet interface. It also supports out-band management function from RS232 console interface. Besides, it supports network configuration functions, like VLAN, Trunking, Port Mirror, QoS, spanning tree and software backup/update. Users can configuration these functions for different network applications. The following is a brief introduction about these functions before the detail operation sections.

1. VLAN (Virtual LAN)

VLAN can divide the switch to several broadcast domains to prevent network traffic between different user groups. This switch supports 802.1Q tag-based VLAN. Users with the same VLAN ID can transfer data to each other. The network traffic will be blocked if they have different VLAN ID.

2. Trunk

If two switches are cascaded together, the bottleneck will happen at the cascading connection. If more cables could be used for the cascading connection, it will reduce the bottleneck problem. In normal case, switches will become unstable because of traffic looping when more than one cable is connected between them. If the switches support trunk function, they can treat these cables as one connection between them. The traffic looping will not happen between these cables and the switches will work stable with bigger bandwidth between them.

This switch supports trunk function and users can configure it with the following steps.

- a. Enable trunk function.
- b. Select the port partition for trunk.
- c. Assign ports to a trunk. For example, assign Port 1,2,3 for Trunk 1.

Notes: About redundant application

The trunk connection supports redundant function. If any trunk cable is broken, the traffic going through that cable will be transferred to another trunk cable automatically. For example, if user port Port 6 is assigned to Port 1 in a Trunk and Port 1 connection breaks, Port 2 will take over the traffic for Port 6 automatically. (It could be used for redundant application.)

3. Spanning Tree Protocol

Spanning tree is a protocol to prevent network loop in network topology. If network loop happens, it will cause switches in the network unstable because more and more traffic will loop in the network. If network loop happens, spanning tree protocol will block one connection in the loop automatically. But

it will also cause a 30 seconds delay if any network connection is changed because of the network topology detection operation of the protocol. Because there could be more than one switch in the network, users can configure this function for their network spanning tree application.

4. Port Mirror

This switch operates in store-and-forward algorithm so it is not possible to monitor network traffic from another connection port. But the port mirror function could copy packets from some monitored port to another port for network monitor. This switch also provides DA/SA filtering function for monitoring the traffic to/from some user

5. QoS

For Quality of Service request in a network, packets could be classified to different forwarding priorities. For real-time network traffic (like video, audio), it needs higher priority than normal network traffic. With the definition of packet priority, it could have 8 priority levels (from 0 to 7). This switch supports four priority level queues on each port. It could be configured for port-based or 802.1P tagged based. User can define the mapping (0 – 7) to the four priority queues.

6. Static Mac ID in ARL table

The switch can learn the Mac address from user's packets and keep these Mac address in the ARL table for store-and-forward table lookup operation. But these Mac addresses will be deleted from ARL table after some time when users do not send any packets to the switch. This operation is called aging and the time is called aging time. It is 5 minutes normally (it could be changed by users.) If users want to keep a Mac address always in ARL table for some port, they can assign the Mac address to ARL table. These Mac ID are called Static Mac address. This switch supports static Mac address assignment. *The static Mac address assignment will also limit the Mac address could be used or rejected on the assigned port only with the port security configuration function.* For example, assigning "00-c0-f6-11-22-33" to Port 5 will always keep this Mac ID alive on Port 5 but also limit this Mac address could work on Port 5 only or rejected from Port 5 - depending on the setting of its port security mode.

Note: About Static Mac Address Filter-in (port binding) function

There is a "Mac Security Configuration" function for port security mode. If it is set to Accept mode, only these static Mac addresses can access network through the assigned port. The other Mac addresses will be forbidden for network access through that port. This function can be used for port binding security application. Please refer to Section 5.2 / 5.3 for the details of the Mac address filter-in operation of the switch.

7. IEEE 802.1x Port Security Function

If the 802.1x function is enabled, the switch will act as an authenticator for users accessing network through the switch. It will need a RADIUS server for the authentication function. Users will be asked for username and password before network access. If the RADIUS server authenticates it, the switch will

enable the port for network access. This function is very useful for network security application to prevent illegal users access network through the switch. This switch supports MD5, TLS and PEAP authentication types.

8. Rate Control

This function can limit the burst traffic rate for physical ports. The traffic could be ingress traffic or egress traffic. This function can protect the network bandwidth usage by different users.

9. IP Multicast with IGMP Snooping

IP multicast function can forward packets to a group of users connected on different ports. The user group is learned by the switch from the packets from IGMP active router with IGMP snooping function. It is often used for video applications.

10. Software Backup/Update

This switch supports backup and update functions for its internal software and its network configuration. It could be done in three ways.

- a. From console when booting : doing by Xmodem protocol and by terminal program for boot code and run-time code updating.
- b. From console/Telnet when running : doing by TFTP protocol and it will need a TFTP server in network for run-time code and configuration backup/update.
- c. From web browser : doing by http protocol and by web browser for run-time code and configuration backup/update.

5.2 Management with Console Connection

Please follow the steps to complete the console hardware connection first.

1. Connect from the console port of the switch to COM port of PC with the console cable.
2. Start the terminal program of Windows. Create a new connection and select COM port of PC used for the console. Set the configuration of the terminal as **[38400,8,N,1]**. (You can find the terminal program in [Start] -> [Programs] -> [Accessory Programs] -> [Communication] -> [Terminal]. If you cannot find it, please install it from your Windows Installation Disk. Please refer to your Windows user manual for the installation.)
3. Power on the switch.

If everything is correct, the booting screen will appear in the terminal program when the switch is powered on. It will stop at the following screen after some initializing messages.

Booting Program Version 1.01.00, built at 16:06:25, Feb 19 2003

RAM: 0x00000000-0x00800000, 0x0000cc78-0x007f3000 available
FLASH: 0x05800000 - 0x05900000, 16 blocks of 0x00010000 bytes each.
==> enter ^C to abort booting within 3 seconds

Start to run system initialization task

[System Configuration]
Company Name :
Model Name : Intelligent Switch
MAC Address : 00:C0:F6:71:71:71
Firmware Version : 2.08.02

Press <ENTER> key to start.
UCD-SNMP version 4.1.2

Press Enter key, user name and password will be requested. The default user name and password is "**admin**" / "**123456**".

After login the switch, a prompt will be shown. Because this switch supports command-line for console interface, you can press "?" or "**help**" to check the command list first.

Note: Management with **Telnet** connection has the same interface as console connection.

With **help** command, you can find the command list as follow.

```
-----  
>help  
[Command List]  
?..... Help commands  
backup..... Backup run-time firmware or configuration file  
del..... Del commands  
find..... Find commands  
exit..... Logout  
help..... Help commands  
logout..... Logout  
ping..... Ping a specified host with IP address  
reset..... Reset system or reset factory default setting  
set..... Set commands  
show..... Show commands  
upgrade..... Upgrade run-time firmware or configuration file  
>  
-----
```

Here is the detail about these commands.

1. **Backup** command

This switch supports TFTP protocol for firmware and configuration update and backup. You should select backup *firmware* or *configuration* first. And provide the IP address of the TFTP server and the backup file name for the backup operation.

Enter “backup” at the prompt, the command syntax will be shown.

```
>backup  
Syntax: backup [firmware | config] ip filename
```

For example, “back config 192.168.1.80 abcd” will backup the configuration to TFTP server 192.168.1.80 and its file name is “abcd”.

2. **Del** command

The “del” command can delete static entries in ARL table, disable Mirror function, remove ports in a trunk group, remove forwarding ports for trunk port.

Enter “del” at the prompt, the command syntax will be shown.

```
>del  
[Command List]  
..... Help commands  
help..... Help commands  
arl..... Delete a specified MAC address from ARL table  
mirror..... Disable mirror and delete mirror capture port  
trunk..... Destroy a specified trunk group  
1qvlan..... Destroy a specified VLAN
```

➤ *Delete static entries in ARL table . . .*

```
>del arl
```

Del ARL [xx-xx-xx-xx-xx-xx] [port#]

xx-xx-xx-xx-xx-xx is a assigned static Mac ID in ARL table of the switch. You can remove it from the table with the command. For example, "del arl 00-11-22-33-44-55 3" will delete the Port 3 static Mac ID "00-11-22-33-44-55" from ARL table.

➤ *Disable Mirror function . . .*

```
>del mirror
Disable mirror function
```

➤ *Remove All Ports in a Trunk Group . . .*

```
>del trunk
Syntax: Del TRUNK [trunk#]
```

[trunk#] is the trunk group number and all the trunk ports in this trunk will be removed by this command. For example,"del trunk 3" will remove all trunk ports from Trunk 3 and Trunk 3 becomes a null trunk.

➤ *Delete a 802.1Q VLAN . . .*

```
>del 1qvlan
Syntax: del 1qvlan Vid
```

This command will delete the 802.1Q VLAN with the VLAN ID. For example, "del 1qvlan 5" will delete the 802.1Q VLAN with VLAN ID 5.

3. Find command

The "find" command can find an Mac address in the ARL table.

Enter "find" at the prompt, the command syntax will be shown.

```
>find
[Command List]
?..... Help commands
help..... Help commands
arl..... Search a specified MAC address in ARL table
```

The syntax is as follow.

```
>find arl
Find ARL [xx-xx-xx-xx-xx-xx]
```

If the Mac address is in ARL table, it will be shown as follow.

```
>find arl 00-c0-f6-11-22-33
This MAC [00-c0-f6-11-22-33] is DYNAMIC in port [2]!
```

If the Mac address is not in ARL table, it will be shown as follow.

```
>find arl 00-c0-f6-77-88-99
Failed!
```

Note: “Dynamic” means the Mac address could be dynamic learning and aging by the switch. “Static” means the Mac address is fixed in ARL table.

4. **Exit** command

This is a logout command – the same as Logout command.

5. **Help** command

This is a help command (the same as “?” command) and the switch will prompt command list for this command.

6. **Logout** command

This is a logout command – the same as Exit command.

7. **Ping** command

User can use this command to ping another network device to verify the network connection and activity. (It is similar to the ping command in MS-DOS.)

Enter “ping” at the prompt, the command syntax will be shown.

```
>ping
Syntax: ping [-n count] [-l length] [-t] [-w timeout] ip
-n count : Number of echo requests to send.
-l length : Send buffer size, and length is between 64~8148
-t       : Ping the specified host until stopped by <ESC> key.
-w       : Timeout in milliseconds to wait for each reply.
ip       : IP address (xxx.xxx.xxx.xxx)
```

For example, “ping 192.168.1.80”. “Ctrl-C” can be used to break continuous ping operation.

8. **Reset** command

The command can be used to reset switch or restore factory default setting.

Enter “reset” at the prompt, the command syntax will be shown.

```
>reset
Syntax: reset [configuration | system]
```

“reset configuration” will restore the configuration to the factory default setting.

“reset system” will reset the switch and the switch will reboot.

9. **Set** command

This command can be used to configure most functions of the switch. Lots of sub-commands are needed for this command.

Enter “set” at the prompt, the sub-command list will be shown.

```
>set
[Command List]
?..... Help commands
help..... Help commands
admin..... Set administrator name and password
arl..... Add a static MAC address in ARL table
eth0..... Set network eth0 configuration
```

idle..... Set idle time for CLI session.
 igmp..... Set IGMP configuration
 mirror..... Set mirror configuration
 age..... Set switch age
 automode..... Set Auto Negotiation or Auto Detect mode
 loopback..... Set Loopback Detection
 port..... Set switch port configuration
 qos..... Set QoS configuration
 snmp..... Set snmp configuration
 trunk..... Set a port to join/leave a specified Trunk Group
 sta..... Set Spanning Tree setting
 http..... Set HTTP Protocol setting
 gvrp..... Set GVRP Protocol setting
 1qvlan..... Set 802.1q VLAN Configuration
 dot1x..... Set 802.1x Configuration
 security..... Set MAC Security Configuration
 ratecontrol.... Set Rate Control Configuration
 stormcontrol... Set Storm Control Configuration

9.1 **set ?** and **set help** command

These two commands will show the sub-command list for set command.

9.2 **set admin** command

This command can be used to modify the user name and password for administrator.

9.3 **set arl** command

This command is for adding static Mac ID to ARL table of the switch.

Its syntax is . . .

```
>set arl
Set ARL [xx-xx-xx-xx-xx-xx] [port#]
```

For example, “set ARL 00-c0-f6-11-22-33 5” will add a static Mac ID “00-c0-f6-11-22-33” to ARL table for Port 5 and this Mac ID will never be aged out from Port 5.

Note: Because the static Mac address is fixed on the assigned port by the switch, the static Mac address can access network through the assigned port only. It will fail to access network through other ports of the switch.

9.4 **set eth0** command

This command is used to configure IP address of the switch.

Its syntax is . . .

```
>set eth0
[Syntax]set eth0 [arg_1 data_1] [arg_1 data_1] ... [arg_n data_n]
[Argument List]
dhcp..... Set DHCP client
ip..... Set IP Address
netmask..... Set netmask
gateway..... Set gateway IP address
```

This switch supports DHCP client function. If you set DHCP enable, it will try to get IP configuration from DHCP server when it boots up. You can use “show net” command to check the DHCP setting and current IP configuration of the switch. If DHCP is enable and the switch cannot find a DHCP server in the network, a message “*BOOTP/DHCP failed on eth0*” will be shown and it will use “192.168.1.5 / 255.255.255.0” as its IP configuration.

If you set DHCP disable, you can set the IP configuration with *ip*, *netmask* and *gateway* commands. For example, “set eth0 ip 192.168.1.250 netmask 255.255.255.0 gateway 192.168.1.154” will set these parameters as the IP address configuration of the switch. After the command, you can use “show net” to verify the setting.

Note: After IP configuration is modified, the switch will reset itself.

9.5 **set idle** command

This command is used to set idle time for console connection. If no any key operation in this idle time, the switch logout automatically for security.

Its syntax is . . .

```
>set idle
```

Syntax: Set idle [timeout value]

For example, “set idle 300” will change the idle time to 300 seconds. It is 10 minutes default. Its valid range is 30 ~ 3600 seconds.

9.6 **set igmp** command

This command is used to enable/disable IGMP snooping function for IP multicast operation.

Its syntax is . . .

```
>set igmp
```

[Command List]

enable..... Enable igmp snooping function

disable..... Disable igmp snooping function

9.7 **set mirror** command

This command is used to configure mirror port function. The following is the sub-command for it.

```
>set mirror
```

[Command List]

?..... Help commands

help..... Help commands

ingress..... Set mirror ingress setting

egress..... Set mirror egress setting

port..... Set mirror capture port setting

enable..... Enable mirror function

disable..... Disable mirror function

9.7.1 **set mirror ?** and **set mirror help** command

This command can show the sub-command list for “set mirror” command.

9.7.2 **set mirror ingress** command

This command is used to configure the mirror operation for ingress traffic.

Its syntax is . . .

```
>set mirror ingress
```

```
[Syntax]set mirror ingress [arg_1 data_1] [arg_1 data_1] ... [arg_n data_n]
```

```
[Argument List]
```

```
div..... Set mirror ingress/egress [div=%d]
```

```
mode..... Set mirror ingress/egress [mode=ALL/SA/DA]
```

```
mac..... Set mirror ingress/egress [mac=xx-xx-xx-xx-xx-xx]
```

```
monitor..... Set mirror ingress/egress [monitor=xx,xx,xx]
```

set mirror ingress div x : every x packets, capture one for mirror. For example, “set mirror ingress div 10” will capture one packet from every ten packets from ingress traffic.

set mirror ingress mode xx : mirror all packets or mirror packets with some DA or SA only. For example, “set mirror ingress mode all” will mirror all packets.

set mirror ingress mac xx-xx-xx-xx-xx-xx : if the mirror mode is for the packets with some DA/SA, users can assign the DA/SA here.

set mirror ingress monitor xx,xx,xx : set the monitored ports here. For example, “set mirror ingress monitor 1,2,5” will mirror the ingress traffic from Port 1,2,5. (Notes: If the monitored traffic exceeds the maximum bandwidth of capture port, flow control function will work on these monitored ports.)

9.7.3 **set mirror egress** command

This command is used to configure the mirror operation for egress traffic.

Its syntax is similar to the mirror operation for ingress traffic. Please refer to “**set mirror ingress** command” section.

9.7.4 **set mirror port** command

This command is used to set the capture port for mirror operation. For example, “set mirror port 3” will capture the mirror traffic to Port 3.

9.7.5 **set mirror enable** command

This command is used to enable the mirror operation.

9.7.6 **set mirror disable** command

This command is used to disable the mirror operation.

9.8 **set age** command

This command is used to change the aging time of the switch.

Its syntax is . . .

```
>set age
```

```
Syntax: set age [time]
```

The aging time is 300 seconds default and its valid range is 0 ~ 65535. If [time] is set to 0, the aging function will be disabled. (Notes: It is different from static Mac ID in ARL table. The connection port is fix for a static Mac ID, but the connection port could be changed for a Mac ID with no aging.)

9.9 **set automode** command

This command is used to set the auto mode function of connection ports. There are two modes for it – an(auto negotiation) and ad(auto detection).

an mode – if the *auto mode* of a port is disabled in port configuration, the switch will disable its auto-negotiation function and the Auto-MDIX function of the port is also disabled. That is the real force-mode setting of the port.

ad mode – if the *auto mode* of a port is disabled in port configuration, the switch will not disable its auto-negotiation function but just modify its auto-negotiation attribute for the speed/duplex mode setting. And the Auto-MDIX function of the port is still enabled.

If the connected device is *auto-negotiation enabled* and you want to set the speed of the connection (for example, 10M/Half), you can select ad mode. If the connected device is in forced mode (for example, 10M/Half) and it is *auto-negotiation disabled*, you can use an mode and set the port to the same configuration as the device in port configuration function.

You can select an mode or ad mode depending on your applications. In most of the connection cases, ad mode is suggested.

9.10 **set loopback** command

This command is used to set the loopback detection function of the switch. This function can detect the loopback problem of the connection cable. (There are transmit wires and receive wires in a network cable. If the transmit wires and the receive wires are short together, the network packets will loop back to the switch. That will cause packet storm in the network.) If this function is enabled, this switch will send ARP packets periodically to detect the loop-back condition. If loopback problem is found, this switch will disable the port that is connected with the bad cable to prevent the packet storm. If the loopback condition is removed, you can use the *release* option to release the disabled ports. (The ARP(Address Resolution Protocol) packet is a broadcast packet with IP address and Mac address of the switch inside.)

Its syntax is . . .

```
>set loopback
```

Syntax: set loopback [enable/disable/release]

enable – enable this function. This switch will send ARP packets periodically to detect the loop-back condition.

disable – disable this function.

release – release these disabled ports for loopback problem

9.11 **set port** command

This command is used to change the connection configuration of ports.

Its syntax is . . .

```
>set port 2
[Syntax]set port [port#] [arg_1 data_1] [arg_1 data_1] ... [arg_n data_n]
[Argument List]
name..... Set port # name [string]
admin..... Set port # admin [enable|disable]
speed..... Set port # speed [auto|10|100|1000]
duplex..... Set port # duplex [full|half]
flowctrl..... Set port # flowctrl [ON|OFF]
```

User can configure the following items for each port.

- a. *Name of a port* with “**name**” sub-command.
- b. *Enable/Disable a port* with “**admin**” sub-command.
- c. *Operation speed of a port* with “**speed**” sub-command.
- d. *Duplex mode of a port* with “**duplex**” sub-command.
- e. *Flow Control function of a port* with “**flowctrl**” sub-command. (There is also a flow control setting command in QoS function. Please refer to the description for “set qos flowctrl” command for the details.)

For example, “set port 1 name YYY admin enable speed 10 duplex half” command will enable Port 1 and set it to 10Mbps/Half Duplex and name it as “YYY”.

9.12 **set qos** command

This command is used to configure QoS function of the switch.

Its syntax is . . .

```
>set qos
[Syntax]set QoS [arg_1 data_1] [arg_1 data_1] ... [arg_n data_n]
[Argument List]
enable..... Set QoS enabled.
disable..... Set QoS disabled.
priority..... Set QoS priority of specified port.
flowctrl..... Set QoS flow control of specified port.
mapping..... Set 802.1p priority to priority queue mapping..
```

This switch supports four priority queues on each port – P0, P1, P2 and P3. Both port-based priority and 802.1P tag priority are supported. This function can be used to configure the priority queues of the switch. Here are the details about these sub-commands.

9.12.1 **set qos enable** command

This command is used to enable QoS operation.

9.12.2 **set qos disable** command

This command is used to disable QoS operation.

9.12.3 **set qos priority** command

This command is used to configure port-based priority. All packets coming from high priority port will always be forwarded to highest priority queue P3. All packets coming from low priority port will always be forwarded to lowest priority queue P0. For example, “set qos priority 3 high” command will set Port 3 as a high priority port.

9.12.4 **set qos flowctrl** command

This command is used to configure flow control function of port when QoS is enabled. There is also a flow control enable/disable function in port configuration. Here is the table about the flow control settings.

Flow control setting in QoS when QoS Enable	Flow control setting in port configuration	Flow control operation
Enable	Enable	Enable
Enable	Disable	Disable
Disable	Enable	Disable
Disable	Disable	Disable

When flow control function is ON, the switch will send pause frame to prevent packet lost when traffic congestion happens. If flow-control function is OFF, the switch will drop packets when traffic congestion happens.

Note: QoS and flow control functions are two conflict operations for a switch. For real QoS request, flow control function should be OFF to allow packets to come in switch and being forwarded by priority when congestion happens. But it depends on user’s application.

For example, “set qos flowctrl 5 off” command will disable flow control operation of Port 5 when QoS is enabled.

9.12.5 **set qos mapping** command

This command is used to map the 802.1P priority 0~7 to the four priority queues. For example, “set qos mapping 3 1” command will map the 802.1P tag priority 3 to priority queue P1 and packets with tag priority 3 will be forwarded to priority queue P1 of egress port.

9.13 **set snmp** command

This command is used to configure SNMP function of the switch.

Its syntax is . . .

```
>set snmp
[Syntax]set snmp [arg_1 data_1] [arg_1 data_1] ... [arg_n data_n]
[Argument List]
name..... Set system name
location..... Set system location
contact..... Set system contact name
getcommunity... Set GET community
setcommunity... Set SET community
trapcommunity.. Set TRAP community
trapip..... Set TRAP IP address
txtrap..... Send Trap for test
```

User can use the command to configure the following items for SNMP operation.

- a. *Name of the switch* with “**name**” sub-command.
- b. *Location of the switch* with “**location**” sub-command.
- c. *Contact for the switch* with “**contact**” sub-command.
- d. *GET Community string* with “**getcommunity**” sub-command
- e. *SET Community string* with “**setcommunity**” sub-command.
- f. *TRAP Community string* with “**trapcommunity**” sub-command.
- g. *TRAP IP Address* with “**tapip**” sub-command.
- h. *Test TRAP Operation* with “**txtrp**” sub-command

For example, “set snmp name ABC location AAA-1F contact Jack” command will set these SNMP information to switch.

9.14 **set trunk** command

This switch supports four trunk groups (Trunk 1 ~ 4) maximum. They are disabled and null trunk groups default. Users can use this command to configure trunk function of the switch.

Its syntax is . . .

```
>set trunk
```

Syntax : Set trunk enable

Description: Enable trunk function.

Syntax : Set trunk disable

Description: Disable trunk function.

Syntax : Set trunk [+/-] [port#] [trunk#]

Examples : Set trunk +1+5-7 1

Description: Add port 1,5 to trunk group 1 and
remove port 7 from trunk group 1

- a. **enable** and **disable** sub-commands are used to enable/disable trunk function of the switch.
- b. **set trunk [+/-] [port#] [trunk#]** is sub-command to add/remove ports to/from trunk groups. Only Port 1~8 is available for trunk operation.

9.15 **set sta** command

This command is used to configure spanning tree protocol of the switch.

Its syntax is . . .

```
>set sta
```

[Command List]

?..... Help commands

help..... Help commands

enable..... Enable Spanning Tree function

disable..... Disable Spanning Tree function

bridge..... Set Spanning Tree bridge configuration

port..... Set Spanning Tree port configuration

- a. **set sta ?** and **set sta help** commands will show the sub-command list
- b. **set sta enable** and **set sta disable** commands will enable/disable spanning tree function of the switch.
- c. **set sta bridge** command is used to configure for the switch.

Its syntax is . . .

```
>set sta bridge
[Syntax]set sta bridge [arg_1 data_1] [arg_1 data_1] ... [arg_n data_n]
[Argument List]
priority..... Set bridge priority.
hello..... Set bridge hello time
age..... Set bridge maximum age
delay..... Set bridge forward delay time
```

priority (0~65535) : Bridge priority is for selecting the root device, root port, and designated port. The device with the highest priority (lowest value) becomes the STA root device. If all devices have the same priority, the device with the lowest MAC address will then become the root device.

hello (0~65535) : the period to send the spanning tree maintenance packet if the switch is the root of the spanning tree. Default is 2 seconds.

age (6~40) : the spanning tree aging time if no spanning tree maintenance packet is received. It will cause the spanning tree to re-create. Default is 20 seconds.

delay (4~30): the maximum waiting time before changing states (i.e., listening to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a blocking state; otherwise, temporary data loops might result.

- d. **set sta port** command is used to configure for ports of the switch.

Its syntax is . . .

```
>set sta port 1
[Syntax]set sta port [port#] [arg_1 data_1] [arg_1 data_1] ... [arg_n data_n]
[Argument List]
priority..... Set port priority.
cost..... Set port path cost
```

priority (0~255) : If the path cost for all ports on a switch are the same, the port with the highest priority (lowest value) will be forwarded when looping happens. If more than one port have the same highest priority, the port with lowest port number will be forwarded.

cost (1~65535) : It is used to determine the best path between devices if looping happens. Lower values will be forwarded and should be assigned to ports with fast connections. Higher values will be blocked and should be assigned to ports with slow connections. The suggestion values are 100(50~600) for 10M, 19(10~60) for 100M and 4(3~10) for 1000M connections.

9.16 set http command

This command is used to enable/disable the http function of the switch. Because hacker or worm/virus (like ColdRed) often attacks http server, this command is provided to disable http to prevent it. (If this switch is installed in public Internet without any firewall protection, we suggest users to disable the http interface and use Telnet or SNMP instead.)

Its syntax is . . .

```
>set http
Syntax : Set http enable
Description: Enable http protocol function.
Syntax : Set http disable
Description: Disable http protocol function.
```

9.17 **set gvrp** command

This command is used to enable/disable the GVRP function for 802.1Q VLAN. If this function is enabled, this switch will learn the 802.1Q VLAN from another 802.1Q network devices if it receives their packets. The learned remote 802.1Q VLAN will be shown in the dynamic 802.1Q VLAN table.

Its syntax is . . .

```
>set gvrp
Syntax: set gvrp [1|0] <1:enable,0:disable>
```

9.18 **set 1qvlan** command

This command is used to configure 802.1Q VLAN of the switch.

Its syntax is . . .

```
>set 1qvlan
[Syntax]set 1qvlan [arg_1 data_1] [arg_1 data_1] ... [arg_n data_n]
[Argument List]
enable..... Set 802.1Q VLAN enabled.
disable..... Set 802.1Q VLAN disabled.
ingressfilter.. Set ingress filter Enable or Disable.
create..... Create new 802.1Q vlan with specified VLAN ID and VLAN Name.
modify..... Modify forward and untagged memeber.
pvid..... Set the Port VLANID of specified port.
mgrpvid..... Set the Port VLANID of management port.
priority..... Set the priority of specified port.
block..... Set the Block of VID.
mode..... Set the VLAN Mode.
```

enable and **disable** sub-commands are used to enable/disable 802.1Q VLAN function of the switch.

ingressfilter sub-command is used to enable/disable VLAN filtering executed at ingress port.

Enable: the VLAN filtering function will be executed when packet is received at ingress port. If the ingress port is in the same VLAN of the received packet, this packet will go to forwarding stage. Otherwise, the packet will be discarded by VLAN filtering at ingress port.

Disable: the VLAN filtering function will be executed when packet is forwarded to egress port.

create sub-command is used to create a static 802.1Q VLAN. For example, "set 1qvlan create ABC 20" will create a static 802.1Q VLAN with name "ABC" and ID 20.

modify sub-command is used to modify a static 802.1Q VLAN setting.

Its syntax is . . .

```
>set 1qvlan modify
```

```
Syntax : set 1qvlan modify [+|-] [port#] VLANID [1:<tagged>|0:<untagged>]
```

```
Examples : Set 1qvlan +1+5-7 2 1
```

Description: Add port 1,5 to VLAN 2 as tagged port and remove port 7 from VLAN 2

pvid sub-command is used to set Port VLAN ID. The Port VLAN ID is used as the VLAN ID for tag adding when untagged packet is translated to tagged packet. For example, "set 1qvlan pvid 3 10" will set the PVID of Port 3 as 10.

mgrpvid sub-command is used to select the VLAN group that is allowed to management the switch. Only the users in the selected VLAN can manage the switch by Http, Telnet and SNMP. For example, "set 1qvlan mgrpvid 5" will allow the users in the VLAN with VLAN ID 5 to manage the switch remotely.

priority sub-command is used to set port priority for tag adding when untagged packet is translated to tagged packet. For example, "set 1qvlan priority 3 2" will set the port priority of Port 3 as 2. The priority information in tag will be filled with 2 when the untagged packet coming to Port 3 is translated to tagged packet.

block sub-command is used to set active VLAN ID block range for 802.1Q VLAN operation. The valid VLAN ID number is 1 ~ 4094. Because this switch can support up to 512 active VLAN ID number, the valid VLAN ID number is divided into eight blocks as below.

```
Syntax : set 1qvlan block [Block#]
```

```
Examples : Set 1qvlan block 0
```

Description: Set current block as 0 and active VID: 1~511

Block	Active VID	Block	Active VID
0	1~ 511	4	2048~2559
1	512~1023	5	2560~3071
2	1024~1535	6	3072~3583
3	1536~2047	7	3584~4094

Select one of the blocks and only the selected VLAN ID range is active for 802.1Q VLAN operation of the switch.

mode sub-command is used to select the VLAN mode for 802.1Q VLAN operation. There are three modes for VLAN function –SVL (Shared VLAN), IVL (Individual VLAN) and SVL/IVL.

```
Syntax : set 1qvlan mode [0:SVL|1:IVL]
```

```
Examples : Set 1qvlan mode 0
```

Description: Set current vlan mode as SVL

```
0: SVL mode
```

```
1: IVL mode
```

```
2: SVL/IVL mode
```

SVL mode – the switch will do packet forwarding according to its Mac address only.

IVL mode – the switch will do packet forwarding according to its Mac address and its VLAN ID.

SVL/IVL mode – its operation is the same as IVL mode but for untagged port is used as the uplink port in MDU/MTU application.

For most VLAN applications, SVL mode is suggested.

9.19 **set dot1x** command

This command is used to configure the 802.1x function of the switch.

Its syntax is . . .

```
>set dot1x
[Syntax]set dot1x [arg_1 data_1] [arg_1 data_1] ... [arg_n data_n]
[Argument List]
enable..... Set 802.1x enable
disable..... Set 802.1x disable
transparent.... Set 802.1x transparent
re_au..... Set 802.1x Re-authentication
reauthtime..... Set 802.1x Re-authentication Timeout Period
reauthcnt..... Set 802.1x Re-authentication Max Count
reqcnt..... Set 802.1x Max Request Count
sertime..... Set 802.1x Server Timeout Period
supptime..... Set 802.1x Supplicant Timeout Period
quiettime..... Set 802.1x Quiet Timeout Period
txtime..... Set 802.1x Tx Timeout Period
rsip..... Set Radius Server Address
authport..... Set Authenticate Port of Radius Server
shkey..... Set 802.1x Security Key
portauth..... Set 802.1x port auth mode
```

enable sub-commands is used to enable 802.1x authentication function.

disable sub-command is used to disable 802.1x function.

transparent sub-command is used to set the operation of 802.1x function to transparent mode. In this mode, the switch will forward the 802.1x packets only.

re_au sub-command is used to enable the re-authentication function of the switch. When the re-authentication time is up, the switch will start the re-authentication process.

reauthtime sub-command is used to set the timeout period of the re-authentication process.

reauthcnt sub-command is used to set max count for re-authentication request in the re-authentication process. If the max count is met, it will become un-authentication state. The valid value is 1~10.

reqcnt sub-command is used to set max request timeout count between the switch and RADIUS server before authentication fail. The valid value is 1~10.

sertime sub-command is used to set the request timeout value between the switch and RADIUS server. The valid value is 0~65535.

supptime sub-command is used to set the timeout value between the switch and users (called "supplicant" in 802.1x) after first identification. The valid value is 0~65535.

quiettime sub-command is used to set the quiet time value between the switch and the user before next authentication process when authentication fail.

txtime sub-command is used to set the timeout value for the identification request from the switch to users. The request will be re-tried until the

reauthcnt is met. After that, authentication fail message will be sent. The valid value is 0~65535.

rsip sub-command is used to set the IP address of RADIUS server.

authport sub-command is used to set the handshaking port number between the switch and RADIUS server. It could be different for different RADIUS servers.

shkey sub-command is used to set the security key between the switch and RADIUS server.

portauth sub-command is used to set the authentication mode for a physical port. Its syntax is . . .

```
set dot1x portauth [port#] [auto|fa|fu|no]
```

- auto: the authentication mode of the port depending on the authentication result of the port
- fa (force-authenticated): will force the port always being authentication successful in 802.1x process and the real authentication result will be ignored.
- fu (force-unauthenticated): will force the port always being authentication unsuccessful in 802.1x process and the real authentication result will be ignored.
- none: 802.1x function will not be executed on the port, i.e. disabled on the port.

Note: This switch supports MD5, TLS and PEAP authentication types.

9.20 **set security** command

This command is used to set the Mac address security mode of physical port.

Its syntax is . . .

```
>set security
```

```
Syntax: set security [port#] [mode]
```

```
[mode]: 0 – disable Mac address security operation
```

```
1 – “Accept” mode, only the user with the static address can access the port
```

```
2 – “Reject” mode, only the user with the static address cannot access the port
```

For examples, “set security 1 1” will set Port 1 to accept the users with the static Mac addresses configured on Port 1. Please refer to “set ar!” command for static address setting. Or, you can set static address from the “Dynamic Mac Address Table” in web interface. The table will show the learned Mac addresses and you just need to select from the learned address list.

Note: Here is an *Application Note* for Mac address filter-in function.

It needs two conditions for Mac address filter-in function working.

1. The port security mode is set to “Accept”.

2. Static Mac address is assigned on Port (for example, Mac 1 on Port 1).

In this case, only Mac 1 can access network through Port 1. But there is also a limitation for Mac 1 - it can access network through Port 1 only because it is a static fixed address on Port 1.

9.21 **set ratecontrol** command

This command is used to set the maximum traffic rate to/from physical ports of the switch.

Its syntax is . . .

>set ratecontrol

Syntax 1 : Set ratecontrol drop [0|1]

Examples : Set ratecontrol drop 1

Description: Set drop packet for ingress limit enable.

Syntax 2 : Set ratecontrol [ingress|egress] [port#] [0-127]

Examples : Set ratecontrol ingress 1 10

Description: Set port 1 ingress rate control with $10 \times 64\text{K} = 640\text{K}$

Rate = No Limit , N=0,

Rate = $N \times 64\text{Kb}$, with N=1~28.

Rate = $(N-27) \times 1\text{Mb}$, with N=29~127.

set ratecontrol drop [0|1] : this subcommand is used to enable/disable the packet dropping operation when ingress traffic exceeds the maximum ingress rate. If it is set to “disable”, flow control operation will be used instead of packet dropping.

set ratecontrol [ingress|egress] [port#] [0-127] : this subcommand is used to set the maximum traffic rate for ingress/egress traffic through physical ports of the switch. The rate control could be from 64Kbps to 100Mbps.

N=0 : rate control is disable, rate = No Limit.

N=1~28 : rate = $N \times 64\text{Kbps}$, for rate 64K, 128K, ..., 1792Kbps control

N=29~127 : rate = $(N-27) \times 1\text{Mbps}$, for rate 2M, 3M, ..., 100Mbps control

9.22 set stormcontrol command

This switch supports broadcast storm, multicast storm and flooding storm control functions. With this command, you can configure the storm control function of the switch.

[Syntax]set StormControl [arg_1 data_1] [arg_1 data_1] ... [arg_n data_n]

[Argument List]

rate..... Set Control Rate for Storm Control.

bc..... Set Broadcast Control for each Port.

mc..... Set Multicast Control for each Port.

fd..... Set Flooding Control for each Port.

set stormcontrol rate : this subcommand is used to set the maximum storm rate that is allowed for the control.

Syntax : set stormcontrol rate [rate#]

Examples : Set stormcontrol rate 0

Description: Set storm control rate as 3.3%

Rate#	Control Rate
0	3.3%
1	5%
2	10%
3	20%

set stormcontrol bc : this subcommand is for broadcast storm control.

set stormcontrol mc : this subcommand is for multicast storm control.

set stormcontrol fd : this subcommand is for flooding storm control.

Syntax : set stormcontrol [bc|mc|fd] [all|none|byport|port#] [1|0]

Examples 1 : Set stormcontrol bc all

Description: Set storm control to suppression broadcast packet for all port.

Examples 2 : Set stormcontrol mc none

Description: Set storm control not to suppression multicast packet for all port.

Examples 3 : Set stormcontrol fd byport

Description: Set storm control to suppression flooding packet according to each port setting.

Examples 4 : Set stormcontrol fd 1 1

Description: Set storm control to suppression flooding packet for port 1 enabled.

10. Show command

This command is used to show configurations of the switch. Here is the sub-command for showing different configuration.

```
>show
```

```
[Command List]
```

```
?..... Help commands
```

```
help..... Help commands
```

```
arl..... Show ARL table
```

```
dynamic..... Show dynamic learning table
```

```
cfg..... Show system configuration
```

```
net..... Show network configuration
```

```
igmp..... Show IGMP configuration
```

```
mirror..... Show mirror configuration
```

```
automode..... Show Auto mode setting
```

```
loopback..... Show the setting of Loopback Detection
```

```
port..... Show switch port configuration
```

```
qos..... Show QoS configuration
```

```
snmp..... Show snmp configuration
```

```
trunk..... Show all TRUNK groups with their members
```

```
sta..... Show Spanning Tree setting
```

```
http..... Show HTTP Protocol setting
```

```
gvrp..... Show GVRP Protocol Status
```

```
1qvlan..... Show 802.1q VLAN Configuratuin
```

```
dot1x..... Show 802.1x Protocol Status
```

```
security..... Show MAC Security Configuration
```

```
ratecontrol.... Show Rate Control Configuration
```

```
stormcontrol... Show Storm Control Configuration
```

10.1 **show ?** and **show help** commands will show the sub-command list.

10.2 **show arl** command will show static Mac ID setting in ARL table. For example,

```
>show arl
```

```
Item Port Mac Address
```

```
1 5 00-C0-F6-11-22-33
```

10.3 **show dynamic** command will show current Mac address table content of the switch. For example,

```
>show dynamic
```

```
[Dynamic Adress Learning Table]
```

Item	Port	Mac Address	VID
1)	3	00-c0-f7-64-64-64	1(0x001)

The extra port is the interface to internal CPU.

10.4 **show cfg** command will show Model Name, Mac ID of the switch and Firmware version. For example,

```
>show cfg
[System Configuration]
Company Name   :
Model Name    : Intelligent Switch
MAC Address   : 00:C0:F6:FF:0D:01
Firmware Version : 2.08.02 < Dec 4 2003 17:27:16 >
```

10.5 **show net** command will show current IP address configuration of the switch. For example,

```
>show net
[eth0] Network Configuration:
DHCP      : ENABLE
IP Address: 192.168.1.5
Netmask   : 255.255.255.0
Gateway   : 192.168.1.120
```

10.6 **show igmp** command will show current IGMP snooping function enable/disable status and the IP multicast groups that learned by the switch. For example,

```
>sh igmp
[IGMP Configuration]
IGMP Switch : Enabled
Total Groups : 3
=====
[Group 1] IP Address : 224.0.0.9
         Member Port : 1
[Group 2] IP Address : 224.0.0.2
         Member Port : 1
[Group 3] IP Address : 224.2.188.136
         Member Port : 4,5
=====
```

10.7 **show mirror** command will show mirror function configuration of the switch. For example,

```
>show mirror
[Mirror Configuration]
Mirror Switch: Disabled
Capture port : 1
Ingress DIV=3  Mode=SA  MAC=00-C0-F6-11-22-33
         Port List: 2
Egress DIV=1   Mode=ALL  MAC=00-00-00-00-00-00
         Port List:
```

This setting will mirror those packets that with source Mac address 00C0F6112233 ingress to Port 2 to Port 1 for every three matched packets.

10.8 **show automode** command will show current auto mode setting for port configuration. It could be **Auto Negotiation** and **Auto Detect**.

For *Auto Negotiation* mode, the switch will do auto-negotiation ON/OFF when the auto mode of port is enabled/disabled. But the Auto-MDIX function will also be disabled when the auto-negotiation function of port is OFF.

For *Auto Detect* mode, the switch will always keep auto-negotiation function ON but just modify its attribution if the auto mode of port is disabled. The Auto-MDIX function will be always enabled in this mode.

For applications, you should select *Auto Detect* mode if the connected device is auto-negotiation enabled. And you can select *Auto Negotiation* mode if the connected device is auto-negotiation disabled.

For most applications, *Auto Detect* mode is OK.

10.9 **show loopback** command will show current setting of loopback detection function. If this function is enabled, this switch will send ARP packets periodically for loopback detection.

For example,

```
>show loopback
[Loopback Detection]: Disable
```

10.10 **show port** command will show status and configuration of each switch port. For example,

```
>show port
[Port Configuration]
Port Name      Status  Disable  Auto.  Speed  Duplex  Flow Control
1  10/100M base-T  DOWN    NO     ON     10     Half     OFF
2  10/100M base-T  DOWN    NO     ON     10     Half     OFF
3  10/100M base-T  DOWN    NO     ON     10     Half     OFF
4  10/100M base-T  DOWN    NO     ON     10     Half     OFF
5  10/100M base-T  DOWN    NO     ON     10     Half     OFF
6  10/100M base-T  DOWN    NO     ON     10     Half     OFF
7  10/100M base-T  DOWN    NO     ON     10     Half     OFF
8  10/100M base-T  DOWN    NO     ON     10     Half     OFF
```

10.11 **show qos** command will show QoS configuration of the switch. For example,

```
>sh qos
[QoS Configuration]
Qos setting   : Disabled
=====
802.1p Priority Tag 7 ==> P3
802.1p Priority Tag 6 ==> P3
802.1p Priority Tag 5 ==> P2
802.1p Priority Tag 5 ==> P2
802.1p Priority Tag 3 ==> P1
802.1p Priority Tag 2 ==> P1
802.1p Priority Tag 1 ==> P0
```

802.1p Priority Tag 0 ==> P0

```
=====
Port Priority Port Priority Port Priority Port Priority
[ 1] Low  [ 2] Low  [ 3] Low  [ 4] Low
[ 5] Low  [ 6] Low  [ 7] Low  [ 8] Low
=====
```

```
=====
Port FlowCtrl Port FlowCtrl Port FlowCtrl Port FlowCtrl
[ 1] OFF  [ 2] OFF  [ 3] OFF  [ 4] OFF
[ 5] OFF  [ 6] OFF  [ 7] OFF  [ 8] OFF
=====
```

```
=====
Port 802.1p Port 802.1p Port 802.1p Port 802.1p
[ 1] OFF  [ 2] OFF  [ 3] OFF  [ 4] OFF
[ 5] OFF  [ 6] OFF  [ 7] OFF  [ 8] OFF
=====
```

The first part is the mapping of 802.1P priority values 0~7 to the four priority queues of the switch.

The second part is the port-based priority setting.

The third part is the flow control setting for each port when congestion happens.

The fourth part is the 802.1P priority function status for each port.

10.12 **show snmp** command will show SNMP configuration of the switch. For example,

```
>show snmp
[SNMP Configuration]
System Name   : Switch
Location      : 3F
Contact name  : Jack
Get Community : public
Set Community : private
Trap Community 1: public
Trap IP 1     : 0.0.0.0
Trap Community 2: public
Trap IP 2     : 0.0.0.0
Trap Community 3: public
Trap IP 3     : 0.0.0.0
Trap Community 4: public
Trap IP 4     : 0.0.0.0
Trap Community 5: public
Trap IP 5     : 0.0.0.0
```

10.13 **show trunk** command will show trunk configuration of the switch. For example,

```
>show trunk
[Trunk Group Setting]
Trunk Setting   : Enabled
[TRUNK] [Port List]
=====
[ 1]          1 2 3
=====
```

10.14 **show sta** command will show spanning tree configuration of the switch.

For example,

```
>show sta
[Spanning Tree Configuration]
SPT Setting      : Disabled
Bridge Priority   : 32768
Bridge Hello Time : 2
Bridge Max Age   : 20
Bridge Forward Delay: 15
Port Priority    : 1[128] 2[128] 3[128] 4[128] 5[128]
                  : 6[128] 7[128] 8[128]
Port Path Cost   : 1[19] 2[19] 3[19] 4[19] 5[19]
                  : 6[19] 7[19] 8[19]
```

It shows the Bridge and Port spanning tree configuration.

10.15 **show http** command will show http enable/disable state. For example,

```
>show http
[HTTP Protocol Setting]
HTTP Setting: Enabled
```

10.16 **show gvrp** command will show the GVRP function status for 802.1Q VLAN operation.

For example,

```
>show gvrp
GVRP Protocol : Disable
```

10.17 **show 1qvlan** command will show current 802.1Q VLAN status and settings.

Its syntax is . . .

```
>show 1qvlan
Syntax: show 1qvlan [status|static|table|pvid]
      status : show 802.1q, Ingress Filter and GVRP protocol status
      static  : show STATIC VLAN table content
      table   : show ALL VLAN table content
      pvid    : show the PVID of ports
```

For example,

```
>show 1qvlan status
802.1Q VLAN   : Enable
Ingress Filter : Disable
Current Block : 0, Active VID: < 0 ~ 511 >
Current VLAN Mode: SVL
```

```
>show 1qvlan static
----- Static 802.1Q VLAN Table -----
VLAN ID : 1(0x001) , VLAN Name: Default VLAN
Tagged Member Port :
Untagged Member Port : 1 2 3 4 5 6 7 8
```

```
VLAN ID : 2(0x002) , VLAN Name:
Tagged Member Port :
Untagged Member Port :
```

----- Finish -----

```
>show 1qvlan table
```

----- All 802.1Q VLAN Table -----

VLAN Type: STATIC

VLAN ID : 1(0x001) , VLAN Name: Default VLAN

Tagged Member Port :

Untagged Member Port : 1 2 3 4 5 6 7 8

VLAN Type: STATIC

VLAN ID : 2(0x002) , VLAN Name:

Tagged Member Port :

Untagged Member Port :

----- Finish -----

```
>show 1qvlan pvid
```

```
PORT    PVID
```

```
=====
```

```
1      1(0x001)
```

```
2      1(0x001)
```

```
3      1(0x001)
```

```
4      1(0x001)
```

```
5      1(0x001)
```

```
6      1(0x001)
```

```
7      1(0x001)
```

```
8      1(0x001)
```

```
=====
```

```
Management Port : 1
```

```
=====
```

The PVID of Management Port is for the management interface of the switch. Only the users in the VLAN with VLAN ID equal to the PVID of Management Port can manage the switch from network because they are in the same VLAN.

10.18 **show dot1x** command will show current 802.1x status and settings.

Its syntax is . . .

```
>show dot1x
```

Syntax: show dot1x [config|radius|port]

config : show 802.1x protocol status

radius : show radius server status

port : show ALL ports status

For example,

```
>show dot1x config
```

```
[802.1x Configuration]
```

```
802.1x Protocol           : Disabled
```

```
Re-authentication        : Disabled
```

```
Re-authentication Timeout Period : 3600
```

```
Re-authentication Max Count   : 2
```

```
Max Request Count           : 2
```

```
Server Timeout Period       : 30
```

```
Supplicant Timeout Period   : 30
```

```
Quiet Timeout Period        : 60
```

```
Tx Timeout Period          : 30
```

```

>show dot1x radius
[Radius Server Configuration Menu]
Radius Server IP Address : 192.168.1.222
Radius Server Port Number : 1812
Security Key           : 12345678

```

```

>show dot1x port
802.1X Port Authentication Configuration Menu
PORT   Status   Auth.Mode
=====
 1     -       FA
 2     -       FA
 3     -       FA
 4     -       FA
 5     -       FA
 6     -       FA
 7     -       FA
 8     -       FA

```

The Auth. Mode could be Auto, FA(Forced Authenticated), FU(Forced Unauthenticated) and No(No 802.1x function).

10.19 **show security** command will show current Mac address security mode for port.

Its syntax is . . .

```

>show security
[MAC Security Configuration]

```

```

=====
Port   Static MAC Number   Security Control
=====
 1     0                   No Security
 2     0                   No Security
 3     0                   No Security
 4     0                   No Security
 5     0                   No Security
 6     0                   No Security
 7     0                   No Security
 8     0                   No Security
=====

```

The “Security Control” could be *No*, *Accept*, *Reject* modes. “No” is for no Mac address security. “Accept” is for only the static Mac address can access. “Reject” is for only the static Mac address cannot access.

10.20 **show ratecontrol** command will show current rate control setting for each port. For example,

```

>show ratecontrol
[Rate Control Configuration]
[Drop Packet for Ingress Limit :] Disable
=====
Port   Ingress   Egress
=====

```

```

1   Disable   Disable
2   Disable   Disable
3   1280Kb   Disable
4   Disable   Disable
5   Disable   40Mb
6   Disable   Disable
7   Disable   Disable
8   Disable   Disable
=====

```

10.21 **show stormcontrol** command will show current packet storm control settings. This switch supports broadcast storm, multicast storm and flooding storm control functions. With this command, you can find the maximum storm rate setting and the port list doing the storm control.

For example,

```

>show stormcontrol
[Storm Control Configuration]
=====

```

```

Control Rate   : 3.3%
Broadcast Control: By Port
Multicast Control: By Port
Flooding Control : By Port
=====

```

```

Port Broadcast Multicast Flooding
=====

```

```

1   -   -   -
2   -   -   -
3   -   -   -
4   -   -   -
5   -   -   -
6   -   -   -
7   -   -   -
8   -   -   -
=====

```

11. Upgrade command

This switch supports firmware or configuration upgrade with TFTP protocol. This command is used to upgrade firmware or configuration to the switch.

Its syntax is . . .

```

>upgrade

```

Syntax: upgrade [firmware | config] ip filename

ip is the IP address of TFTP server.

filename is the upgrade file name in the TFTP server.

For example, “upgrade config 192.168.1.80 abcd” command will load file “abcd” from TFTP server 192.168.1.80 as its configuration setting.

5.3 Management with Http Connection

Users can manage the switch with Http Web Browser connection. Before http connection, IP address configuration of the switch should be done first.

Please follow the instruction in Section 5.2 to complete the console connection and use “**show net**” command to check IP address of the switch first. If users want to change the IP address of the switch, use “**set eth0 ip xxx.xxx.xxx.xxx netmask xxx.xxx.xxx.xxx gateway xxx.xxx.xxx.xxx**” command to modify the IP address of the switch. The default IP configuration is 192.168.1.5 and mask 255.255.255.0.

After IP address configuration done and the switch is connected to network, users can start Http connection by entering IP address of the switch to the web address line in Web Browser. A login screen will be prompted for user name and password. The default user name and password is “**admin**” / “**123456**”. Then the management homepage will appear.



Left part of the homepage is a function list. Users can select one of them for status monitoring or switch configuration.

Upper part of the homepage is the link status of the switch. Three different colors are used to show different status of ports – Link Up, Link Down and Port Disable.

Middle part of homepage is the main operation area for each function.

The details about management with http connection will be shown in the following sub-sections.

1. System Configuration

System Configuration	
Main Board Information	
Firmware Version	2.10.02 < Jul 22 2004 11:06:35 >
Mac Address	00:C0:F7:22:33:44
Port Number	8
VLAN Max. Group	256
KRMP Max. Group	256
Loopback Detection	<input type="radio"/> Enable <input checked="" type="radio"/> Disable <input type="button" value="Release Port"/>
Auto Mode	<input checked="" type="radio"/> Auto Detect <input type="radio"/> Auto Negotiation
ARL Aging	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
ARL Aging Time (seconds)	<input type="text" value="300"/>
<input type="button" value="Apply"/>	
System Information	
System Name	<input type="text"/>
Location	<input type="text"/>
Contact	<input type="text"/>
<input type="button" value="Apply"/>	
Network Configuration	
DHCP Client	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
IP Address	<input type="text" value="192.168.1.7"/>
Network Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.1.120"/>
<input type="button" value="Apply"/>	
Administrator Configuration	
Old Username	<input type="text"/>
Old Password	<input type="text"/>
New Username	<input type="text"/>
New Password	<input type="text"/>
Confirm Password	<input type="text"/>
<input type="button" value="Apply"/>	

“System Configuration” is the homepage of the switch.

Users can find firmware version and Mac address of the switch in this page. And users can configure the following items in this page.

a. **Loopback Detection** : If the transmit wires and receive wires are short together in a cable, the packets will loop back to the switch and cause packet storm in the network. The Loopback Detection function will detect loopback problem and disable the ports that loopback condition happens. You can click [Release Port] to release these disabled ports when the loopback condition is removed. (Note: This switch will send ARP packets periodically for loopback detection.)

b. **Auto Mode** : User can select the auto function of connection port here.

For *Auto Negotiation* mode, the switch will do auto-negotiation ON/OFF when the auto mode of port is enabled/disabled. But the Auto-MDIX function will also be disabled when the auto-negotiation function of port is OFF.

For *Auto Detect* mode, the switch will always keep auto-negotiation function ON but just modify its attribution if the auto mode of port is disabled. The Auto-MDIX function will be always enabled in this mode.

For applications, you should select *Auto Detect* mode if the connected device is auto-negotiation enabled. And you can select *Auto Negotiation* mode if the connected device is auto-negotiation disabled.

For most applications, *Auto Detect* mode is OK.

c. **Aging time** : Users can enable/disable the aging operation of the switch and modify the aging time here. (Default is 300 seconds.)


d. **System Name / Location / Contact** : These information is useful for switch management in a network system. It is the same information used in SNMP protocol.

e. **DHCP / IP Address / Network Mask / Gateway** : This switch supports DHCP client function. If DHCP Client is enabled, this switch will try to get the IP configuration from DHCP server. If DHCP server is not found, it will use the default IP 192.168.1.5 instead. If DHCP Client is disabled, you can set IP address configuration of the switch here. This switch will reboot itself after any IP configuration is modification.

f. **Administrator Configuration** : This is for network administrator to change his/her username and password. (Default is admin/123456.)

If any modification, click [Apply] to activate the new setting.

2. Port Configuration

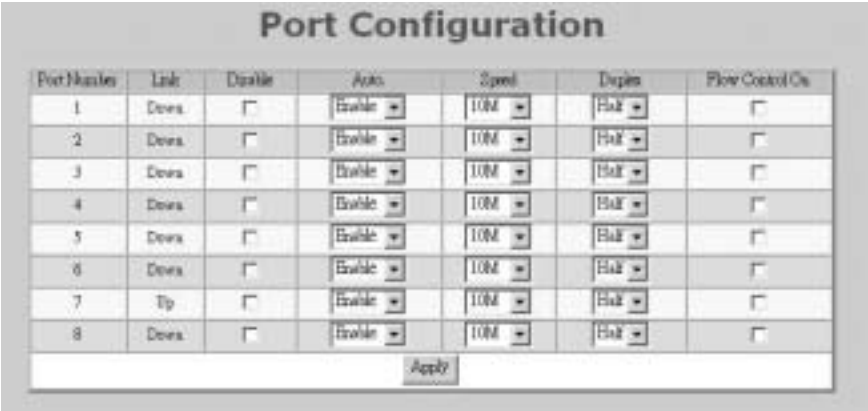

Port Number	Link	Disable	Auto	Speed	Duplex	Flow Control On
1	Down	<input type="checkbox"/>	Enable ▾	10M ▾	Full ▾	<input type="checkbox"/>
2	Down	<input type="checkbox"/>	Enable ▾	10M ▾	Full ▾	<input type="checkbox"/>
3	Down	<input type="checkbox"/>	Enable ▾	10M ▾	Full ▾	<input type="checkbox"/>
4	Down	<input type="checkbox"/>	Enable ▾	10M ▾	Full ▾	<input type="checkbox"/>
5	Down	<input type="checkbox"/>	Enable ▾	10M ▾	Full ▾	<input type="checkbox"/>
6	Down	<input type="checkbox"/>	Enable ▾	10M ▾	Full ▾	<input type="checkbox"/>
7	Up	<input type="checkbox"/>	Enable ▾	10M ▾	Full ▾	<input type="checkbox"/>
8	Down	<input type="checkbox"/>	Enable ▾	10M ▾	Full ▾	<input type="checkbox"/>

Users can find the link status.

Link : It shows the link status of each port.

Disable : You can disable a port here.

Auto : You can enable/disable the auto mode of ports here. If auto is disabled, the Speed and Duplex setting will become active. The auto mode could be auto-negotiation or auto-detect. You can select the auto mode in *System Configuration* page.

Speed : You can select the operation speed here when auto is disabled.

Duplex : You can select the operation duplex mode when auto is disabled.

Flow Control On : Flow Control function is disabled by default. You can enable it here.

Click [Apply] after any modification.

3. Spanning Tree

Spanning Tree -- Bridge Configuration

Spanning Tree	<input type="button" value="Disable"/>
Bridge Priority	<input type="text" value="0"/>
Hello Time	<input type="text" value="2"/>
Forward Delay	<input type="text" value="15"/>
Maximum Age	<input type="text" value="20"/>

In the page, users can enable/disable spanning tree function and configure the bridge parameters. Please refer to **9.14 of Section 5.2** for the details of these parameters. Press [Apply] after any modification.

Configuring port parameters for spanning tree, press [Configuration STA Port] and the configuration page will appear.

Spanning Tree -- Bridge Port Configuration

Bridge Port Number	<input type="button" value="1"/>
Port Priority (0..255)	<input type="text" value="128"/>
Port State	Forwarding
Port Enable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Port P2P Cost (1..65535)	<input type="text" value="19"/>
Port Designated Root	00:00:F6:74:11:11 [128]
Port Designated Cost	10
Port Designated Bridge	00:00:F6:74:11:11 [128]
Designated Port	1 [128]
Port Forward Transitions	1

Users can select a port number and check its spanning tree status. Users can also modify these parameters. Please refer to **9.14 of Section 5.2** for the details of these parameters. Press [Apply] after any modification.

4. Dynamic Mac Address Table

Dynamic MAC Address Table

Destination Port	3 ▾
MAC Address	Static
00-0d-61-0a-45-96	<input type="checkbox"/>
00-aa-aa-aa-aa-bb	<input type="checkbox"/>
00-20-ed-37-29-11	<input type="checkbox"/>
00-e0-18-a1-c4-d7	<input type="checkbox"/>
00-80-c8-bf-10-b6	<input type="checkbox"/>
00-c0-f6-b0-23-2d	<input type="checkbox"/>
00-c0-f6-b2-8b-2a	<input type="checkbox"/>
00-c0-f6-00-83-12	<input type="checkbox"/>
00-dd-dd-00-00-01	<input type="checkbox"/>

This web page will show the Mac address table content of the switch for connection ports. Select the port first and the Mac address learned by the switch on the port will be shown. Up to 128 Mac addresses will be shown.

Users can select the Mac addresses that will be assigned as the static Mac addresses for the port here. Click [Add to Static Address Table] after the selection. Then, the selected Mac addresses will be moved to Static Mac Address table and will not be shown in this table any more. Users can click "Static Address Table" at the left side of the web page to check the static address assignment.

For the details about Static Address, please refer to Section for "Static Address Table".

Note: Because of *aging time operation* of switch, wrong Mac addresses could be found in the Mac Address Table sometimes. These wrong Mac addresses are the machines that had ever accessed to the port and the switch learns them into the learning table. The switch will clear them when the aging time is up. Users can shorten the aging time and refresh the web page when they want to get the correct Mac address table content. Then, recover the aging time when the correct Mac address table content is got.

5. Static Address Table

The screenshot displays the 'Static Address Table' configuration page. At the top, there is a form with two input fields: 'MAC Address (00-10C-3DC-3DC-10C-3DC)' and 'Destination Port'. Below the form is a table with three columns: 'ID', 'MAC Address', and 'Destination Port'. Each row in the table has a 'Delete' button. The table contains three entries:

ID	MAC Address	Destination Port	
1	00-a0-c5-16-7c-63	3	Delete
2	00-e0-18-a1-c8-d7	3	Delete
3	00-c0-85-55-09-96	3	Delete

This switch supports static Mac address assignment. Users can assign static Mac addresses by the two methods.

- Select from the Mac address list in “Dynamic Mac Address Table” page.
- Assign manual. Enter a Mac address and select the port, then add this entry to the static Mac address table.

The switch will not age out these static Mac addresses. But there is a limitation for these static Mac addresses - *they are allowed to work on the assigned port only because they are static fixed on the assignment port.*

If users want to delete an entry in the static Mac address table, click [Delete] button of the entry and the static Mac address will be removed from the table.

About Port Security function . . .

You can configure “Mac Security Configuration” function for port access security with Mac address. There are “Accept” and “Reject” modes for it.

“Accept” mode: Only the static address can access network via the port.

“Reject” mode: Only the static address cannot access network via the port.

6. Mac Security Configuration

Port Number	Static MAC Number	Security Control
1	0	Static mode with Accept function ▼
2	0	No Security ▼
3	0	No Security ▼
4	0	No Security ▼
5	0	Static mode with Reject function ▼
6	0	No Security ▼
7	0	No Security ▼
8	0	No Security ▼

This function is used to set the security modes for static Mac address on the port. There could be three options for this function.

1. **No Security:** No any Mac address access limitation for the port, i.e. every Mac address could access network via the port.
2. **Static mode with Accept function:** Only these static Mac address can be accepted by the port, i.e. only the user with the static Mac address can access network via the port.
3. **Static mode with Reject function:** Only the static address will be rejected by the port, i.e. other Mac address except the static Mac address can access network via the port.

7. 802.1Q VLAN Configuration

802.1Q VLAN Configuration

802.1Q VLAN	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	<input type="button" value="Apply"/>
GVRP Protocol	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	<input type="button" value="Apply"/>
Ingress Filter	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	<input type="button" value="Apply"/>
VLAN Mode	<input checked="" type="radio"/> SVL <input type="radio"/> IVL <input type="radio"/> SVL/IVL	<input type="button" value="Apply"/>
Active VLAN ID	<input type="text" value="Block 0 (1~ 511)"/> <input type="button" value="v"/>	<input type="button" value="Apply"/>

Port VID

Management Port	<input type="text" value="1"/>	<input type="button" value="Apply"/>
-----------------	--------------------------------	--------------------------------------

Port Number	Port VID	Priority Setting
1	<input type="text" value="1"/>	<input type="text" value="0"/> <input type="button" value="v"/>
2	<input type="text" value="1"/>	<input type="text" value="0"/> <input type="button" value="v"/>
3	<input type="text" value="1"/>	<input type="text" value="0"/> <input type="button" value="v"/>
4	<input type="text" value="1"/>	<input type="text" value="0"/> <input type="button" value="v"/>
5	<input type="text" value="1"/>	<input type="text" value="0"/> <input type="button" value="v"/>
6	<input type="text" value="1"/>	<input type="text" value="0"/> <input type="button" value="v"/>
7	<input type="text" value="1"/>	<input type="text" value="0"/> <input type="button" value="v"/>
8	<input type="text" value="1"/>	<input type="text" value="0"/> <input type="button" value="v"/>

This function is used to configure 802.1Q VLAN function.

802.1Q VLAN : This function can enable/disable 802.1Q VLAN operation.

GVRP Protocol : The GVRP protocol can learn remote 802.1Q VLAN on other devices and add to dynamic 802.1Q VLAN table. You can enable/disable the operation of this protocol.

Ingress Filter : The ingress-filter function is for doing VLAN filtering at ingress port. If the VLAN of the packet is in the same VLAN of the ingress port, it will be forwarded to egress port. Otherwise, it will be discarded.

VLAN Mode : This function can select different VLAN modes of 802.1Q VLAN operation. There are three modes for VLAN function – SVL (Shared VLAN), IVL (Individual VLAN) and SVL/IVL.

SVL mode – the switch will do packet forwarding according to its Mac address only.

IVL mode – the switch will do packet forwarding according to its Mac address and its VLAN ID.

SVL/IVL mode – its operation is the same as IVL mode but for untagged port is used as the uplink port in MDU/MTU application.

For most VLAN applications, SVL mode is OK.

Active VLAN ID : This function is used to set active VLAN ID block range for 802.1Q VLAN operation. The valid VLAN ID number is 1 ~ 4094. Because this switch can support up to 512 active VLAN ID number, the valid VLAN ID number is divided into eight blocks as below.

Block	Active VID	Block	Active VID
0	1 ~ 511	4	2048 ~ 2559
1	512 ~ 1023	5	2560 ~ 3071
2	1024 ~ 1535	6	3072 ~ 3583
3	1536 ~ 2047	7	3584 ~ 4094

Select one of the blocks and only the selected VLAN ID range is active for 802.1Q VLAN operation of the switch.

Port VID : This setting is for untagged packet translated to tagged packet. The Port VID and Priority Setting will be used for tag adding in the translation. The **Management Port** is the management interface of the switch. You can configure its PVID here. It will limit *only the users in the VLAN with VLAN ID equal to Management Port PVID can manage the switch from network by Http, Telnet and SNMP.*

8. Static 802.1Q VLAN

Static 802.1Q VLAN

Create New Static VLAN

VLAN ID	<input type="text"/>	VLAN Name	<input type="text"/>	(Maximum length = 16)
<input type="button" value="Create"/>				

Show Static VLAN Table

Select VLAN:

VLAN ID	VLAN Type	VLAN Name							
1	STATIC	Default VLAN							

Port Number	1	2	3	4	5	6	7	8
Untagged	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Tagged	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Non-catchable	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

You can create static 802.1Q VLAN group here. You need to input the VLAN ID and VLAN Name to create a VLAN. The valid VLAN ID is 1 ~ 4094. The VLAN ID should be in the active VLAN ID block set in “802.1Q VLAN Configuration” page.

After a VLAN is created, you can select the VLAN in “Show Static VLAN Table” to get the configuration of the VLAN. The new VLAN is empty by default. You can select the port for the VLAN and tagged/untagged for it. After that, click [Apply] to complete the VLAN configuration.

About Tagged/Untagged

The tagged port will always send out packets with tag. If untagged packet is received from ingress port, tag will be added with the PVID setting of ingress port before forwarded to tagged port. The 802.1Q VLAN information will be carried in the tag.

The untagged port will always send out packets without tag. If tagged packet is received from ingress port, tag will be removed from the packet before forwarded to untagged port. Most the network adapters or devices are untagged devices. If they are connected to tagged port, they will fail to access network because of the tag in packet.

About Switch Management from Users

Only the users in the same VLAN as Management Port PVID (set in “802.1Q VLAN Configuration” page) can manage the switch via Web/Telnet/SNMP. The users in other VLAN cannot manage the switch from network.

9. 802.1Q VLAN Table

802.1Q VLAN Table										
Show VLAN Table										
Select VLAN										1 (of 000) ▾
VLAN ID	VLAN Type	VLAN Name								
1	STATIC	Default VLAN								
Port Number	1	2	3	4	5	6	7	8		
U & S	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	
U & D	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	
T & S	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
T & D	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	

U & S : An Untagged and Static member.
 U & D : An Untagged and Dynamic member.
 T & S : A Tagged and Static member.
 T & D : A Tagged and Dynamic member.

This table will show the activity of 802.1Q VLAN.

Select a VLAN in “Show VLAN Table”. The 802.1Q VLAN activity status will be shown for the selected VLAN.

If GVRP protocol is enabled, this table will also show the learned remote 802.1Q VLAN.

10. 802.1x Configuration

802.1x Configuration

Authentication Configuration	
802.1x System Authentication Status	Disable ▾
Re-authentication	Disable ▾
Re-authentication Timeout Period	3600 (0.65535) seconds
Re-authentication Max Count	2 (1-10)
Max Request Count	2 (1-10)
Server Timeout Period	30 (0.65535) seconds
Supplicant Timeout Period	30 (0.65535) seconds
Quiet Timeout Period	60 (0.65535) seconds
Tx Timeout Period	30 (0.65535) seconds
<input type="button" value="Apply"/>	

Radius Server Configuration	
Radius Server IP Address	192.168.1.222
Radius Server Port Number	1812
Security Key	12345678
<input type="button" value="Apply"/>	

The 802.1x function can limit the port access for authentication users only. It needs a RADIUS server for the authentication process and the switch acts as an authenticator.

The function here is for 802.1x function configuration.

1. 802.1x System Authentication Status: [Enable/Disable/Transparent]
Enable: enable 802.1x function in authentication mode
Disable: disable 802.1x function
Transparent: only forwarding 802.1x packets
2. Re-authentication (enable/disable), Timeout Period and Max Count:
The re-authentication function will re-authenticate users after the timeout period. The Max Count is the maximum re-try count between the switch and users before authentication fail.
3. Max Request Count and Server Timeout Period:

The Server Timeout Period is the timeout period for the request between the switch and RADIUS server.

The Max Request Count is the maximum re-try count between the switch and RADIUS server before authentication fail.

4. Supplicant Timeout Period:

This is the timeout value between the switch and users (called “supplicant” in 802.1x) after first identification. The valid value is 0~65535.

5. Quiet Timeout Period:


This is the quiet time value between the switch and the user before next authentication process when authentication fails.

6. Tx Timeout Period:

This is the timeout value for the identification request from the switch to users. The request will be re-tried until the **Re-authentication Max Count** is met. After that, authentication fail message will be sent. The valid value is 0~65535.

7. Radius Server Configuration:

This is for configuration between switch and RADIUS server.

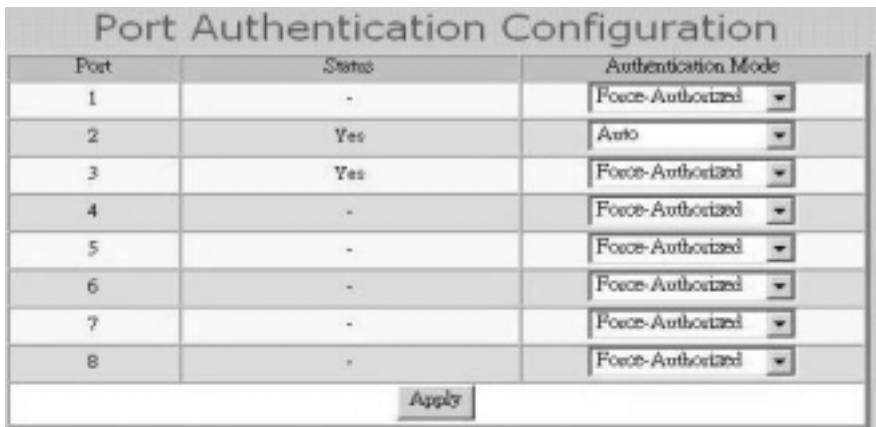

Port	Status	Authentication Mode
1	-	Force-Authorized
2	Yes	Auto
3	Yes	Force-Authorized
4	-	Force-Authorized
5	-	Force-Authorized
6	-	Force-Authorized
7	-	Force-Authorized
8	-	Force-Authorized

The Port Authentication Configuration is used to select the authentication mode for each port of the switch.

1. Auto: This is the normal 802.1x operation mode. The authentication status (authenticated or unauthenticated) depends on the authentication result of port.
2. Force-Authorized: This mode will force the port always being authentication successful in 802.1x process and the real authentication result will be ignored.
3. Force-Unauthorized: This mode will force the port always being authentication fail in 802.1x process and the real authentication result will be ignored.
4. None: This mode will disable 802.1x operation on this port.

11. Trunk

Trunk Function	<input checked="" type="radio"/> Enable <input type="radio"/> Disable		Apply					
Port Number	1	2	3	4	5	6	7	8
Group 1	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Non-trunk	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Apply								

This switch supports 4 trunk groups and they are null by default. If users want to use trunk function, follow the steps to configure it.

- a. Enable Trunk function first.
- b. Assign ports to the trunk. Then click [Apply].
- c. If you want to remove ports from trunk, put them to Non-trunk and click [Apply]. The selected ports will be removed from trunk groups.

If users want to disable trunk function, select “Disable” and click [Apply] button. The switch will clear the Trunk configuration.

About redundant application . . .

The trunk connection supports redundant function. If any trunk cable is broken, the traffic going through that cable will be transferred to another trunk cable in the trunk connection automatically.

12. Mirror

The screenshot shows a configuration window titled "Mirror". At the top, there is a "Mirroring" section with a radio button for "Enable" (which is selected) and a radio button for "Disable". Below this are three main sections: "Ingress" and "Egress", each with a table of ports and a "Files Mode" section.

Mirroring
 Enable Disable

Ingress

Port Number	1	2	3	4	5	6	7	8
Capture Port	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

Files Mode
 All Packets DA SA

Capture Frequency
Mirror one of [1] Packets.

Egress

Port Number	1	2	3	4	5	6	7	8
Monitored Port(s)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Files Mode
 All Packets DA SA


Capture Frequency
Mirror one of [1] Packets.

Follow the steps to configure Mirror function.

- Enable Mirroring first.
- Select the capture port.
- Select the monitored port from Ingress or Egress table – depending on the traffic direction.
- Select the capture mode – All packets or for some special DA/SA address. If DA/SA is selected, enter the special Mac address in “xx-xx-xx-xx-xx-xx” format.
- Select the capture frequency.
- Press [Apply] button.

If users want to disable Mirror function, select Disable and click [Apply].

13. QoS

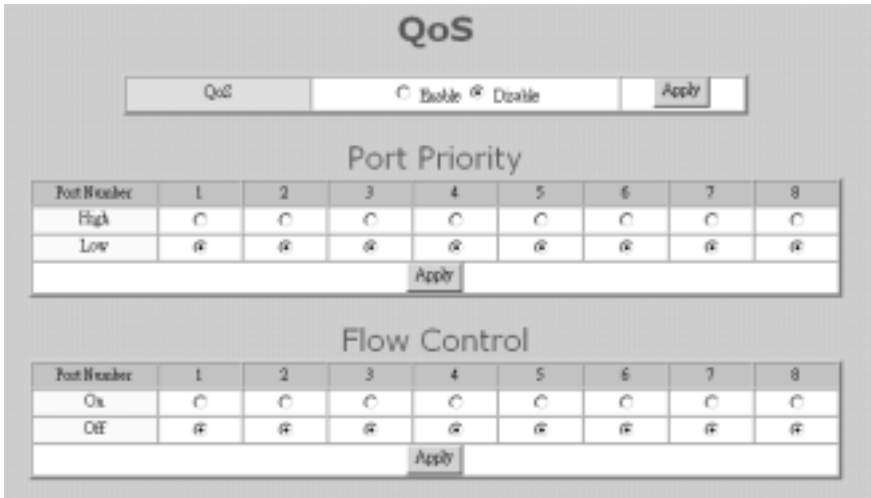

This switch supports four priority queues on each port for QoS operation.

Follow the steps to configure QoS function.

- a. Enable QoS first.
- b. If port-based priority is used, select ports for High and Low priorities. The packets from High priority port will be forwarded to highest priority queue on egress port. And the packets from Low priority port will be forwarded to lowest priority queue on egress port.
- c. There is also a Flow Control ON option in “Port Configuration” page. If Flow Control is ON at both “Port Configuration” page and “QoS” page, the Flow Control function of a port is ON. Otherwise, it is OFF.
If you don’t expect any packet lost, set the Flow Control function ON. But it will conflict with the real QoS request because packets will be paused by the switch when congestion happens. And the switch can not do the QoS request for the packets.
- d. For 802.1P tagged packet, its priority value is 0 ~ 7. Select the ports that enable the 802.1P priority function, i.e. it will forward packet with the priority information in tag. Then you can configure the 802.1P priority mapping to priority queue of port. Please see the picture below.

Click [Apply] to activate the setting after configuration.

If you want to disable QoS operation, select Disable and click [Apply] button.

802.1p Enable

Port Number	1	2	3	4	5	6	7	8
On	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Off	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<input type="button" value="Apply"/>								

802.1P Priority to Priority Queue Mapping

802.1P Priority Tag 7	<input type="text" value="P3"/>
802.1P Priority Tag 6	<input type="text" value="P3"/>
802.1P Priority Tag 5	<input type="text" value="P2"/>
802.1P Priority Tag 4	<input type="text" value="P2"/>
802.1P Priority Tag 3	<input type="text" value="P1"/>
802.1P Priority Tag 2	<input type="text" value="P1"/>
802.1P Priority Tag 1	<input type="text" value="P0"/>
802.1P Priority Tag 0	<input type="text" value="P0"/>
<input type="button" value="Apply"/>	

14. Rate Control

Ingress/Egress Rate Control

Packet Drop for Ingress Limit Enable Disable

Rate = $N \times 64 \text{ Kb}$, with $N = 1 \sim 28$
 ($N - 27$) $\times 1 \text{ Mb}$, with $N = 29 \sim 127$

Port Number	Ingress Rate Control		Egress Rate Control	
1	<input type="text" value="0"/> (0~127)	No Limit	<input type="text" value="0"/> (0~127)	No Limit
2	<input type="text" value="0"/> (0~127)	No Limit	<input type="text" value="0"/> (0~127)	No Limit
3	<input type="text" value="20"/> (0~127)	1280Kb	<input type="text" value="0"/> (0~127)	No Limit
4	<input type="text" value="0"/> (0~127)	No Limit	<input type="text" value="0"/> (0~127)	No Limit
5	<input type="text" value="0"/> (0~127)	No Limit	<input type="text" value="67"/> (0~127)	40Mb
6	<input type="text" value="0"/> (0~127)	No Limit	<input type="text" value="0"/> (0~127)	No Limit
7	<input type="text" value="0"/> (0~127)	No Limit	<input type="text" value="0"/> (0~127)	No Limit
8	<input type="text" value="0"/> (0~127)	No Limit	<input type="text" value="0"/> (0~127)	No Limit

The rate control function can limit the maximum traffic rate for each physical port. The traffic could be ingress traffic or egress traffic.

The rate control range is 64Kbps ~ 100Mbps. Here is the rule for the setting.

Maximum Rate	Rate Control Number (N)	Rule
No Limit	0	0 means no limit.
64K,128K,192K,...,1792Kbps	1 ~ 28	Rate = $N \times 64\text{Kbps}$
2M,3M,4M, ...,100Mbps	29 ~ 127	Rate = $(N-27) \times 1\text{Mbps}$

For example, if you want to limit the download traffic rate of Port 2 to 512Kbps, you should set the Egress Rate Control of Port 2 to 8 (8=512/64 and egress is for download operation and ingress is for upload operation).

The **Packet Drop for Ingress Limit** is for packet dropping operation when ingress traffic rate exceeds the Ingress Rate Control. If it is enabled, the extra packets will be dropped to limit the ingress traffic rate. If it is disabled, flow control function will be used to pause the ingress traffic.

15. Storm Control

Storm Control

Control Rate	3.3%	Apply
Broadcast Control	<input type="radio"/> All <input type="radio"/> None <input checked="" type="radio"/> By Port	Apply
Multicast Control	<input type="radio"/> All <input type="radio"/> None <input checked="" type="radio"/> By Port	Apply
Flooding Control	<input type="radio"/> All <input type="radio"/> None <input checked="" type="radio"/> By Port	Apply

Port	Broadcast	Multicast	Flooding
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Apply

The storm control function can limit the maximum traffic rate for packet storm. There are three traffic storms could be limited – broadcast storm, multicast storm and flooding packet storm. You can enable the storm control by port. Follow the steps to do the storm control settings.

1. Select the control rate.
2. Select which storm will be controlled and which ports will be applied – all of the ports, none of the ports or selected by port in the table.
3. If “By Port” is selected, select the ports that will apply the storm control.

Note:

Broadcast – it is “one to all” traffic. Every port will receive the packets.

Multicast – it is “one to many” traffic. Some ports in a group will receive the packets.

Flooding - it is “one to all” traffic caused by Mac address not found in the switch. Every port will receive the packets.

16. SNMP

SNMP		
Community Name:		
GET	<input type="text" value="public"/>	<input type="text"/>
SET	<input type="text" value="private"/>	<input type="text"/>
Trap	IP Address	Community Name
Trap 1	<input type="text" value="0.0.0.0"/>	<input type="text" value="public"/>
Trap 2	<input type="text" value="0.0.0.0"/>	<input type="text" value="public"/>
Trap 3	<input type="text" value="0.0.0.0"/>	<input type="text" value="public"/>
Trap 4	<input type="text" value="0.0.0.0"/>	<input type="text" value="public"/>
Trap 5	<input type="text" value="0.0.0.0"/>	<input type="text" value="public"/>
<input type="button" value="Apply"/>		

In this page, users can configure GET/SET/Trap Community Name and the IP address for trap operation. Then users can manage this switch with these settings from SNMP management program.

17. IGMP

The screenshot shows the IGMP configuration interface. At the top, the title "IGMP" is displayed. Below it, there is a section for "IGMP Snooping" with radio buttons for "Enable" (selected) and "Disable", and an "Apply" button. Underneath, the text "Members Group (Total : 3)" is shown. A table lists the learned members with columns for Group, Group Address, and Member Port.

Group	Group Address	Member Port
1	224.0.0.2	3
2	239.255.255.250	3
3	224.0.0.9	3

The IGMP function is for IP multicast operation in network. This switch can do IGMP Snooping function to get the IP multicast group information from IGMP active device. The learned IP multicast member group will be shown in the IGMP web page. This switch will forward IP multicast traffic to these member ports that it learned in the group information.

The IGMP snooping function can be enabled/disabled in this page.

18. Statistics

Rx Counter		Statistics
Good Unicast Frame		43430
Good Broadcast Frame		112
Good Multicast Frame		29408
802.3X MAC Control		0
Total Receive Byte Count		5871301
CRC Error		4
Fragment		0
Jabber		0


Tx Counter		Statistics
Good Unicast Frame		40508
Good Broadcast Frame		2228
Good Multicast Frame		32
802.3X MAC Control		0
Total Transmit Byte Count		6694676

Users can find the traffic statistics here. Select port number to get the counters for different port.

Users can modify the refresh interval to get different counter updating period. Click “Refresh” button can update the counter immediately.

Users can reset counters to zero with the “Reset Statistics” button.

19. Tools

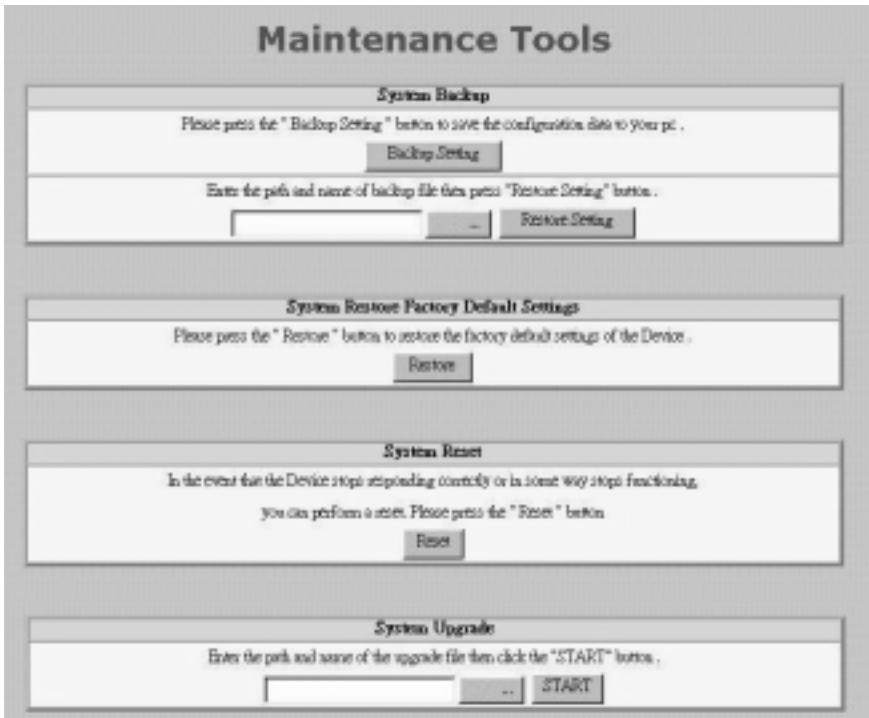

Four functions are supported as the system maintenance tools.

a. System Backup

[Backup Setting] will backup the configuration of the switch to the web management PC.

[Restore Setting] will get the configuration backup file from the web management PC and restore it to the switch.

b. System Restore Factory Default Setting

This function will restore the switch configuration to factory default setting.

c. System Reset

This function will cause the switch reset.

d. System Upgrade

This function will upgrade the system operation software from the web management PC.

5.4 About Telnet Interface

If you want to use Telnet to management the switch from remote site, you have to set the IP/Mask/Gateway address to the switch first from console. Then use "telnet <IP>" command in DOS. Its operation interface is the same as console interface.

5.5 About SNMP Interface

If you want to use NMS to management the switch from remote site, you have to set the IP/Mask/Gateway address to the switch and configure the SNMP setting of the switch from console first. Then you can use SNMP management program to manage this switch.

This switch supports SNMP Version 1 agent function and MIB II(Interface), Bridge MIB, Etherlike MIB and Private MIB. The default GET community name is "public" and SET community name is "private".

This switch supports up to five trap receivers with different trap community names.

6. Software Update and Backup

This switch supports software/configuration backup and update/restore functions. It could be done in three ways.

1. **From console when booting** : by Xmodem protocol and doing by terminal program. This function can be used for run-time code and boot code updating. (Boot code works only at boot time - before the main program starts.)

Press Ctrl-C when the switch is booting, the following message will be shown.

```
      Boot Menu
=====
0: Start the Run-time code
1: Upgrade Run-time code
2: Upgrade Boot Code

=> Select:
```

- a. *Start Run-time code* : This option will continue the booting process.
 - b. *Upgrade Run-time code* : This option will try to update run-time code (main code) from terminal program with Xmodem protocol. If this option is selected, the following message will be shown.
"Waiting to receive file by Xmodem"
Then user can select "Send File" function of terminal program and select Xmodem protocol and the update file, then start the file upgrade.
 - c. *Upgrade Boot Code* : This option will try to update boot code from terminal program with Xmodem protocol. User can select "Send File" function of terminal program and select Xmodem protocol and the update file, then start the file upgrade.
2. **From console/Telnet when running** : Doing by TFTP protocol and it will need a TFTP server in network. Please refer to the description of "*Upgrade*" function in console operation in Section 6.2.
 3. **From web browser** : Doing by http protocol and by web browser. Please refer to the description of "*Tools*" function in Section 6.3.

A. Product Specifications

Access Method	Ethernet , CSMA/CD
Standards Conformance	IEEE 802.3 10BASE-T, IEEE 802.3u 100BASE-TX
Communication Rate	10/100Mbps, Full / Half duplex (auto-negotiation)
MDI/MDIX	Auto-detect for each port
Media Supported	10BASE-T - 100 Ohm Category 3,4,5 twisted-pair 100BASE-TX - 100 Ohm Category 5 twisted-pair
Indicator Panel	LEDs for each unit : Power(PWR), each port : Link/Act, 100M, FDX
Number of Ports	8* RJ45 TX ports
Dimensions	250 x 117 x 37 mm
Certification	VCCI Class A
Power Consumption	8 Watts max.
Temperature	Standard Operating: 0 to 50
Humidity	15% to 95% (Non-condensing)
Bridging Function	Filtering, forwarding and learning
Switching Method	Store-and-forward
Address Table	4K entries(max.)
Buffer Size	256Kbytes/Unit
Filtering/Forwarding Rate	Line speed
Maximum Packet Size	1536 Bytes
Flow Control	802.3x for full duplex, backpressure for half duplex
VLAN	802.1Q VLAN, Tagging/Port-based VLAN /GVRP (256 groups)
QoS	4 transmit queues per ports, for port-based/802.1P tagged-based priority operation
Spanning Tree	Support IEEE 802.1D protocol
Trunking	4 groups max.
Mirror Port	1 capture port for Ingress/Egress traffic, DA/SA filtering function is supported
SNMP	Ver. 1, Supports MIB II(Interface), Bridge MIB, Etherlike MIB, Private MIB
Static Mac ID Access Limit	Static Mac address access limit on port
Security	802.1x (support Authentication and Transparent modes)
Rate Control	Yes, 64Kbps~100Mbps, for ingress/egress traffic
Multicast	IGMP Snooping
Out-band Management	Console
In-band Management	Telnet, http, SNMP
Software Update/Backup	by TFTP protocol, Xmodem, for firmware/ configuration

B. Compliances

EMI Certification

FCC Class A Certification (USA)

Warning: This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A digital device pursuant to Subpart B of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measures are required to correct the interference.

CE Mark Declaration of Conformance for EMI and Safety (EEC)

This is to certify that this product complies with ISO/IEC Guide 22 and EN45014. It conforms to the following specifications:

EMC: EN55022(1988)/CISPR-22(1985)	class A
EN60555-2(1995)	class A
EN60555-3	
IEC1000-4-2(1995)	4kV CD, 8kV AD
IEC1000-4-3(1995)	3V/m
IEC1000-4-4(1995)	1kV - (power line), 0.5kV - (signal line)

This product complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC.

Warning! Do not plug a phone jack connector in the RJ-45 port. This may damage this device.

VCCI Warning

注意

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づく第一種情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

[Manual Revision History]

Version 1.0 Release

Version 2.0 Add the description about Loopback Detection function in set command, show command and System Configuration web page.